


How to Take Measurement



For the measurement please use only the steel measurement tape >

Inside Mount

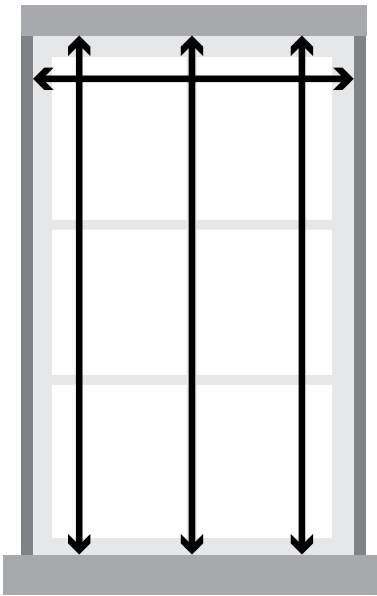


The depth of the frame must be 3.5" or more.

1. Measure the depth of your window frame first to be certain that it is more than 3.5".
2. Measure the window frame width inside at the very top. The width round down to the nearest 1/8" increment.

Please do not do any other deduction from this measurement. There will be 1/8" deduction taken by the manufacturer during the production process.

3. Measure the window frame height inside in 3 places: top, middle and bottom. The tallest height round down to the nearest 1/8" increment.

Outside Mount

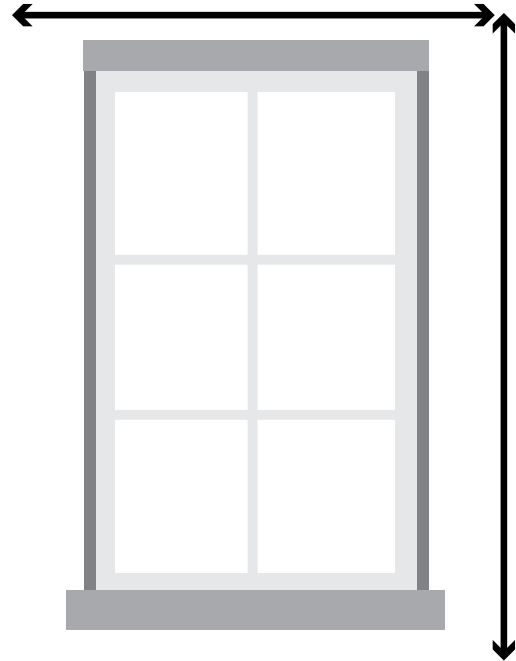

Recommended if there are obstructions inside the window frame

1. Measure the exact width and height you need. The smallest unit of the measurement is 1/8". We recommend to add 2" or 3" each side out of the window frame.

No deduction will be taken by the manufacturer from this measurement.



SUNLIGHT WINDOW COVERINGS

3300 Hwy 7, Suite 800, Vaughan, ON, L4K 4M3
T: 905.761.0051 T: 416.984.6354 T: 416.839.3237
E: info@sunlightwindowcoverings.ca